



How to Install Corner Units

Before You Begin



Print these directions and assemble your tools and supplies.

You will need:

- Scissors
- Pencil
- Tape
- Rotozip or saber saw
- Drill with a standard tile bit
- Silicone
- Level
- Spray bottle with denatured alcohol

Positioning & Attaching the Mounting Bracket



1. Position the mounting bracket at the desired height.



2. Drill clearance holes for screws using pre-drilled bracket as a guide.




How to Install Corner Units

Positioning & Attaching the Mounting Bracket



3. Screw mounting bracket in place using the enclosed 3" screws.

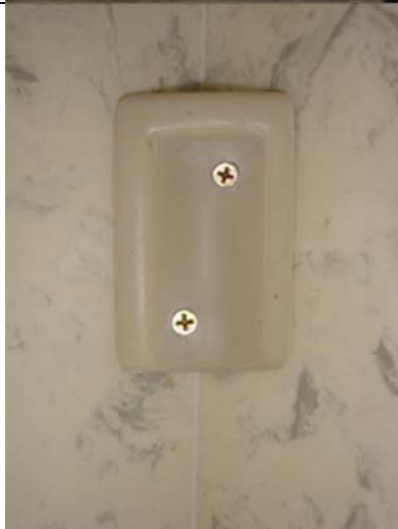

4. Bracket is now ready for unit to be installed.

Installing the Unit



5. Apply silicone to the back of the unit.



How to Install Corner Units



6. Four heavy lumps of silicone will hold the unit in place.



7. Hook unit over mounting bracket.



8. Press corner unit in place.



How to Install Corner Units

Finishing the Unit



9. Apply smooth bead of silicone around perimeter of unit.



10. Spray the silicone bead with denatured alcohol to facilitate ease of cleanup.



How to Install Corner Units

Finishing the Unit



11. Wipe the silicone with fingertip to leave a smooth joint between the unit and the wall surface.



*Congratulations, you have completed
your installation.
Enjoy your CR Products cubby!*