



How to Install Recessed Units

Before You Begin




Note: A drill is NOT needed for *recessed* unit.

Print these directions and assemble your tools and supplies.


You will need:

- Scissors
- Pencil
- Tape
- Rotozip or saber saw
- Silicone
- Level
- Spray bottle with denatured alcohol

Getting Ready

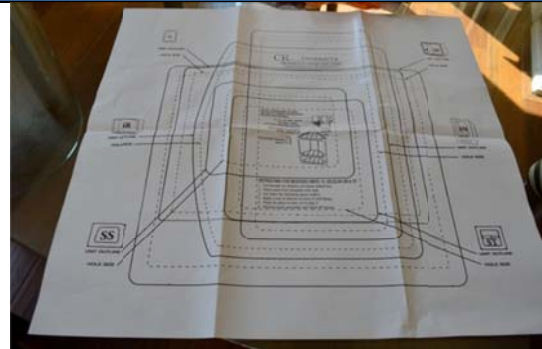

1. Unfold and smooth the paper template.

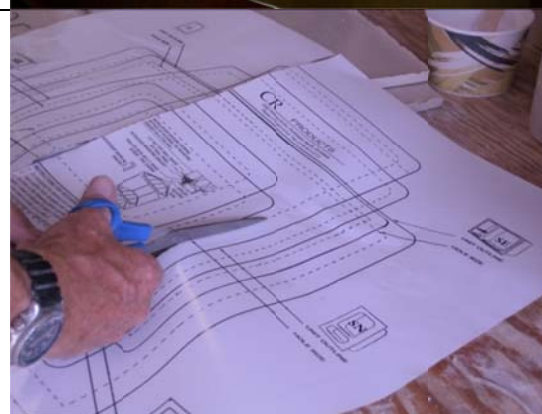

2. Using a pair of scissors, cut out the template for the desired unit from the master template.



How to Install Recessed Units

Getting Ready



3. Using a level to ensure proper positioning of the unit, tape the template on the wall.



4. Using a pencil, trace the outline of the paper template onto the wall surface.

Your wall surface is ready to be cut.





How to Install Recessed Units

Preparing the Hole



5. Using a Rotozip or saber saw, cut the hole in the wall.



6. Apply a heavy bead of silicone to the edge of the hole you have cut.





How to Install Recessed Units

Installing the Unit



7. Position the unit in the hole and press in place.



8. Ensure the unit is level.



How to Install Recessed Units

Finishing the Unit		
		<p>9. Apply smooth bead of silicone around perimeter of unit.</p>
		<p>10. Spray the silicone bead with denatured alcohol to facilitate ease of cleanup.</p>
		<p>11. Wipe the silicone with fingertip to leave a smooth joint between the unit and the wall surface.</p> <p><i>Congratulations, you have completed your installation. Enjoy your CR Products cubby!</i></p>